

CMI

Contents

- [1 Overview](#)
- [2 Prerequisites](#)
- [3 Accessing the CMI](#)
- [4 Basic Configuration of the Appliance through the CMI](#)
- [5 Basic Appliance Administration](#)
- [6 Advanced CMI utilities](#)
 - ◆ [6.1 Hardware Appliances](#)
- [7 Testing](#)
- [8 Known Issues](#)
- [9 Troubleshooting](#)

Overview

The Command Management Interface (CMI) is a menu interface to configure the Swivel appliances.

Prerequisites

Swivel appliance 2.x

Accessing the CMI

The CMI can be accessed in a number of different ways, see [Console Access How to guide](#)

Basic Configuration of the Appliance through the CMI

For the initial configuration steps see [Getting Started Basic CMI configuration](#)

Basic Appliance Administration

[Shutdown and Power Off Procedure](#)

[VIP Status](#)

[Failover to Standby and restart Primary How To](#)

[Restart Tomcat](#)

[Reboot Appliance](#)

Advanced CMI utilities

[Password change for CMI How to Guide](#)

[Recovering admin console access for the Swivel Administration](#)

[Backup Appliance](#)

[Restore Appliance](#)

[Automated FTP Backups](#)

[Patch Swivel Install](#)

[Patch Appliance Install](#)

[SNMP PINsafe How to Guide](#)

[SSL Solutions](#)

[MySQL Appliance Database Synchronisation](#)

[Static Routes How to Guide](#)

Hardware Appliances

[Recovery Disk for Appliances How to Guide](#)

Testing

Known Issues

Troubleshooting

Tomcat stops after logout out of CMI

NTP Settings are not saved

Hostname change fails on appliance

Password recovery for appliance How to guide

VIP problem