

Retrieving PINsafe backup files using Webmin

Contents

- [1 Overview](#)
- [2 Solution](#)
 - ♦ [2.1 Copy a backup file from the appliance using Webmin](#)
 - ♦ [2.2 Copy a backup file from the appliance using WinSCP](#)

Overview

Before changing Swivel configuration settings it is suggested that you take a backup of the current configuration. This will allow the application to be restored to its current state in the event of a problem. One benefit being that the configuration may also be copied to a different appliance, in the event of an appliance being exchanged due to a fault.

- This article contains a step-by-step process to copy a backup file from the appliance to a PC.
- This article is intended for an intermediate user.

If you've not yet taken a backup of your appliance(s), please see the following articles:

- [Backup Appliance](#)
- [Backup PINsafe on a Active/Active appliance](#)
- [Backup PINsafe on a Active/Passive appliance](#)

For further information on copying files with appliances see: [Copying appliance files How to Guide](#) and [Automated SCP Backups](#).

Solution

It is possible to take a range of back-ups from Swivel via the CMI. It is now possible on newer appliances to automate retrieval of backups using FTP, see the [Automated FTP Backups](#) article. However it may be required to retrieve these backup images manually from the Swivel server.

This article explains the various manual options available.

Copy a backup file from the appliance using Webmin

Login to the Webmin console via the following URL:


- <https://ApplianceIP:10000/>

The Login page will be displayed. The default credentials are:


- Username: admin
- Password: lockbox



Once you've logged in, select the 'Others -> Upload and Download' option from the menu bar:

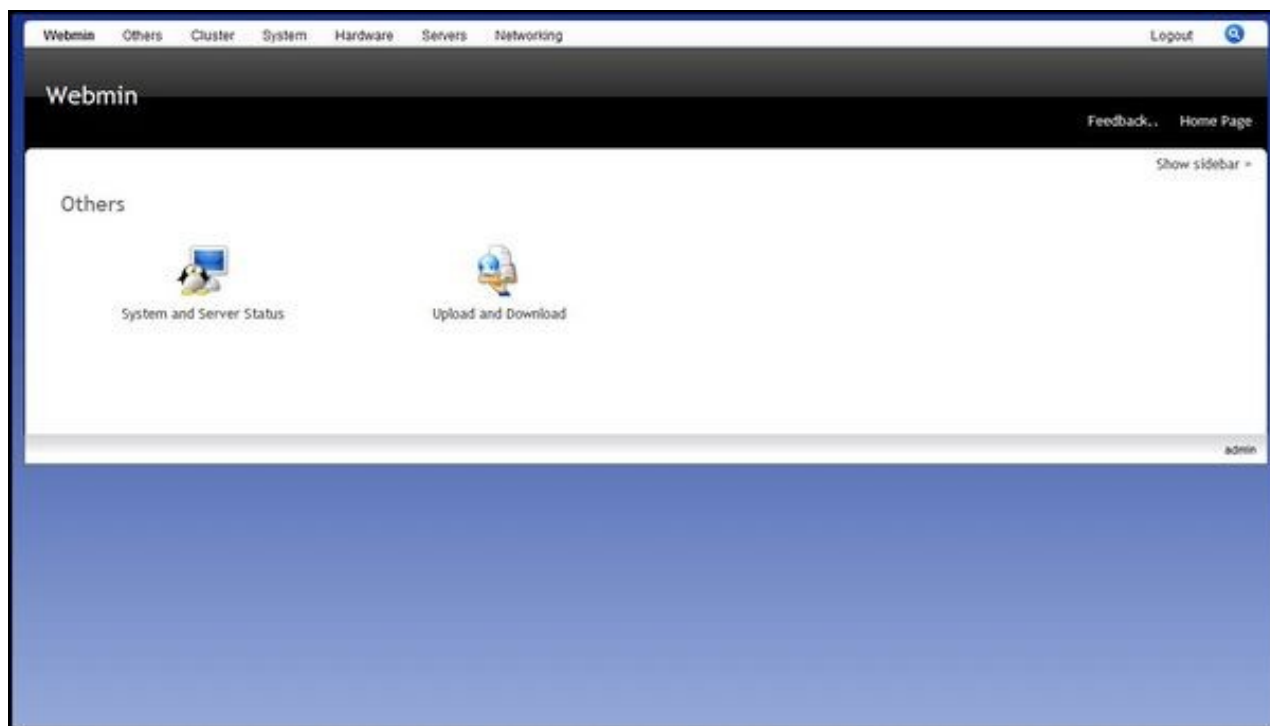



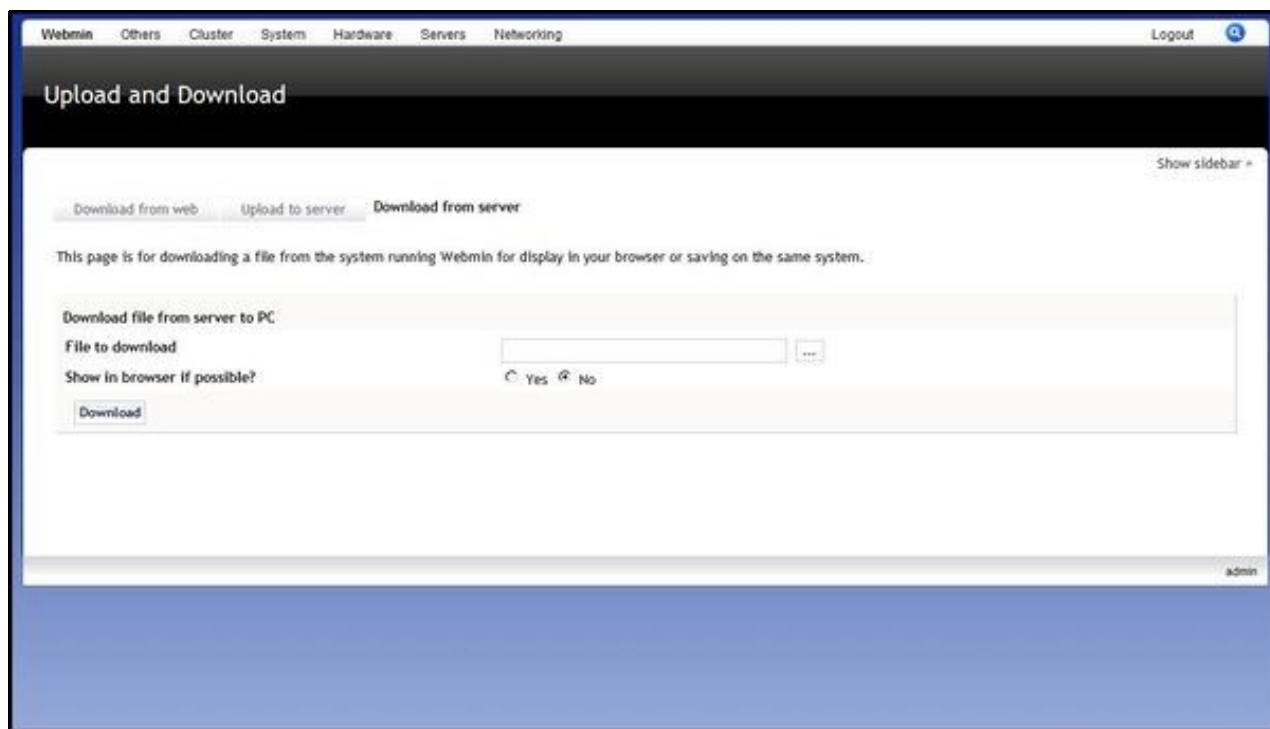









Select the tab entitled "Download from server":



Click the button to the right of the "File to download" dialogue box:

Directory of /backups/

	..	4 kB	09/Jun/2010	14:49
	.default	4 kB	31/Mar/2010	15:15
	.iso-scratch	4 kB	31/Mar/2010	15:15
	010410.4714	4 kB	01/Apr/2010	11:15
	010410.4714_all.log	582	01/Apr/2010	11:15
	010410.4714_full.tar.gz	21 MB	01/Apr/2010	11:15
	060410.4293	4 kB	06/Apr/2010	11:40
	060410.4293_all.log	582	06/Apr/2010	11:41
	060410.4293_full.tar.gz	21 MB	06/Apr/2010	11:41
	070410.5598	4 kB	07/Apr/2010	04:06
	070410.5598_all.log	582	07/Apr/2010	04:07
	070410.5598_full.tar.gz	21 MB	07/Apr/2010	04:07

- Traverse the filesystem by double clicking the links
- Navigate to: /backups
- Select the backup file you wish to download
- Click OK, the required file should be listed

Webmin Others Cluster System Hardware Servers Networking

Upload and Download

Download from web Upload to server Download from server

This page is for downloading a file from the system running Webmin for display in your browser or saving on the same system.

Download file from server to PC

File to download

/backups/100712.7271.tar.gz

...

Show in browser if possible?

☐ Yes ☒ No

Download

- Click Download to download the required backup

Copy a backup file from the appliance using WinSCP

See [WinSCP How To Guide](#)

Keywords: appliance, backup, webmin